

DM2218B Trouble Shooting Guide

1. How to change the filename extension of a .wav file.

In order to change the .wav filename extension, you must first force Windows to show it. Refer to your Windows manual for instruction on how to do it. The following procedure is specific to Windows 2000:

- Select *Start > Settings > Control Panel* and double click "Folder Options". In Windows 98, the "Folder Options" is under *Start > Settings*.
- Click the "File Types" tab, scroll down the list to find the "WAV" extension, highlight it and click "Advanced" (click "Edit" if in Windows 98).
- Check the box for "Always show extension" and click "OK".
- Click "Close" to complete the procedure.

Now you can right-click the file icon and select "Rename" to rename it. If you get a warning message saying "If you change a filename extension, the file may become unusable. Are you sure you want to change it?", click "Yes".

2. How to create the CFG (configuration) file.

The easiest way is to use NotePad (a Windows accessory). Type in the configuration letters and use "Save As" to save the file. In the "Save As" window, select the proper folder for "Save in", select "All Files" for "Save as type", and enter "???.CFG" for "File name" (where ??? can be any name with up to 8 letters). Certain versions of NotePad also have an "Encoding" section for which you should select "ANSI". The CFG file should then be copied onto the CF card. If the CFG file is missing or incorrect, the board will operate in the DN mode.

3. Should the files be copied to the CF card in a certain order?

No. The files, including the CFG file, can be copied to the CF card in any order.

4. Possible causes for "no sound" and "wrong sound".

- The sound file doesn't have the correct filename extension.
- The board is in the wrong operation mode due to missing/incorrect CFG file.
- If the CF card is inserted when the power is on, the board will not work. To solve this problem, turn the power off for a few seconds. If this action does not fix the problem, make sure the sound files are still on the CF card.
- Some CF cards, especially if they have been used in digital cameras, have a non-standard format which can not be read by the board. In this case, re-format the CF card to the standard DOS FAT format and copy the .wav files again.

5. Possible cause for "trashy sound".

Unsupported file formats such as 16-bit resolution, stereo output and ADPCM compression will produce trashy sound. Re-digitize or convert the sound file.

6. Possible cause for "sound too fast/slow".

Unsupported sampling rates will produce sound too fast or too slow. Re-digitize or convert the sound file.

DM2218B User's Manual

Specifications

Operation: playback only

Sound File Format: Windows PCM (.wav) 8-bit mono

Sampling Rate: 6, 8, 11.025, 16, or 22.05 KHz

* All sound files need not have the same sample rate.

Maximum Number of Sound Segments

Direct Mode: 8

Binary Mode: 128

Sequential Mode: 128

Memory Type: CompactFlash card (type 1, 5V), 8 ~ 128 MB

Supply Voltage: 6, or 9 ~ 12 VDC

Audio Output: 1 W max. (4 Ohm load), bridged output

Physical Dimensions: 3.0" x 4.2"

● Direct Mode (default)

Plays up to 8 different sounds. Sound #1 (first priority) is activated by triggering T1, sound #2 (second priority) by triggering T2, and so on. If multiple triggers are applied at the same time, only the sound of the highest priority will be played.

Binary Mode

Plays up to 128 different sounds. To activate a certain sound, apply its file ID number on T1 (LSB) to T7 (MSB), with "1" = +5V and "0" = 0V. Then pulse T8 low to start the playback. The file ID number can be removed after the triggering pulse returns to high (+5V). The file ID number for sound #128 is "0000000".

Sequential Mode

Plays up to 128 different sounds. Sounds are activated sequentially by triggering T1. Sound #1 is played the first time, sound #2 the second time, and so on. The sequence starts from #1 again when the next sound is absent.

● Normal Mode (default)

In this mode, the sound starts as soon as the trigger goes low. No sound can interrupt the playback. A new sound can start only after the current sound is finished. Looping is possible by keeping the trigger low constantly.

Interrupt Mode


In this mode, the sound does not start until the trigger goes high. Any sound, including the sound itself, can interrupt the playback. The playback will be stopped as soon as the interrupting trigger goes low, but the new sound will not start until the trigger goes high. Looping is not possible in this mode.

Hold Mode

In this mode, the sound plays only for as long as the trigger is held low. The playback is not interruptable. Looping is possible in this mode.

DM2218B Installation Guide

Mechanical Drawing (simplified & not to scale)

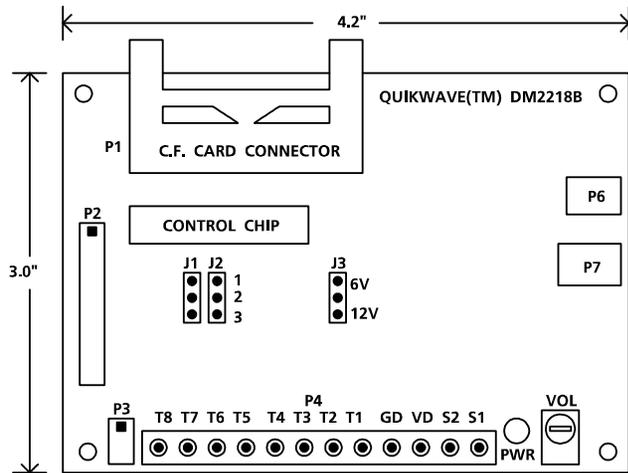

!!! Caution !!!

Always turn off the power before inserting the CF card, or the board will not work.

Terminal Block (P4) Descriptions

Power Input: VD & GD

VD is voltage and GD is ground. For 6 V (battery) operation, set jumper J3 to "6V" (top two pins). For 9 ~ 12 V (DC adaptor) operation, set J3 to "12V" (bottom two pins).

Speaker Output: S1 & S2

The speaker output is a balanced output. Use a low impedance speaker (4~8 Ohm). If external amplification is needed, use either this balanced output or the unbalanced output from P7 depending on the external amplifier's input type.

Busy Output: BY (available on connector P2 only)

BY is an open-collector output with 100 mA current sink capability. It is activated during the entire playback period of any sound. To use it to control a relay, connect the relay coil's positive pin to the supply voltage and the negative pin to BY. Note that the relay coil's voltage rating must be the same as the supply voltage. If a logic high/low level is needed, a 10K pull-up resistor must be added.

Reset Input: RS (available on connector P2 only)

Connect RS to ground to reset the board. Minimum reset duration is 100 ms.

Trigger Inputs: T1 - T8

Either a negative pulse (+5V to ground) or a momentary contact closure with GD can be used for triggering. Minimum trigger duration is 100 millisecond.

Power Light (PWR)

The power light should be on when power is applied.

Volume Pot (VOL)

Turn VOL clockwise to increase the output volume.

Alternate Signal Connector (P2)

This 12-pin, 0.1" center pin header can be used as an alternate signal connector instead of the terminal block. However, it does not carry the speaker output. Pins from top to bottom are VD, GD, BY, RS, T1-T8.

Alternate Power Jack (P6)

This 2.1 mm, center positive coax jack can be used as an alternate power connector instead of the terminal block.

Alternate Speaker Jack (P7)

This 3.5 mm mono phone jack provides single ended output up to 0.25W max.

Configuration Jumpers

J1: (1,2) = normal power, (2,3) = low power

If low power is selected, a popping noise will be heard when the sound starts/stops.

J2: not used.

J3: (6V) = input voltage is 6 VDC

(12V) = input voltage is 9 ~ 12 VDC

* **Caution: The board may be damaged if J3 is not set correctly.**

CompactFlash Card Programming

A CompactFlash (CF) card reader must be used to read and write CF cards. Simply write the sound (.wav) files to the CF card. However, you must change the ".wav" filename extension to a 3-digit number. For example, "lion.001" indicates that it's sound #1 and "frog.128" is sound #128. The order in which these files are written to the card is not important. Files with invalid filename extension are ignored.

Operation Mode & Sample Rate Configuration

To select the desired operation modes, you must copy to the CF card an ASCII text file named "???.CFG" (??? can be any name with up to 8 letters) which contains one and only one of the following two letter word:

DI (Direct, Interrupt)

DN (Direct, Non-Interrupt)

BI (Binary, Interrupt)

BN (Binary, Non-Interrupt)

SI (Sequential, Interrupt)

SN (Sequential, Non-Interrupt)

If the CFG file is missing or incorrect, the board will operate in the DN mode. The CFG file is read by the board upon power up and after reset.

The sound file's sample rate is automatically detected by the board.